

Chassis ANT-IE16

16 Slots 2U 19" Rack Mount Chassis ANT-IE16

16 Slots 2U 19" Rack Mount Chassis for Card-Type Media Converter

Introduction


ANT-IE16 is a 16-slot 19" Rack-Mount Chassis System provides housing for up to 16 JHA series media converters. Designed for continuous operation, the chassis is equipped with dual cooling fans and redundant power supplies (optional). Its Plug-and-Play and Hot-Swap features allow installing/removing the converter unit without powering off the chassis. ANT-IE16 rack-mount chassis eliminates the external power adapters for JHA series media converters and organizes multiple converters in a single unit, which makes it the perfect solution for managing multiple JHA series converters..



Features

- Provides housing for up to 16 JHA series media converters.
- Support AC220V and DC48V two power supply, suitable for a variety of work environments.
- Each card modules are hot swappable.
- Modular power supply design, easy maintenance, better shielding, preventing the normal operation of the power generated electromagnetic signal interference module group.
- Standard chassis can be installed in the engine room rack, easy to manage.
- Simultaneously inserted 16 fiber optic transceivers, each of the transceiver module can be different of rates.
- Power protection: Overvoltage protection, overcurrent protection, short circuit protection.
- All-aluminum design, sophisticated appearance, good ventilation lightweight thermal design to ensure normal and stable operation of the system.

Dimension

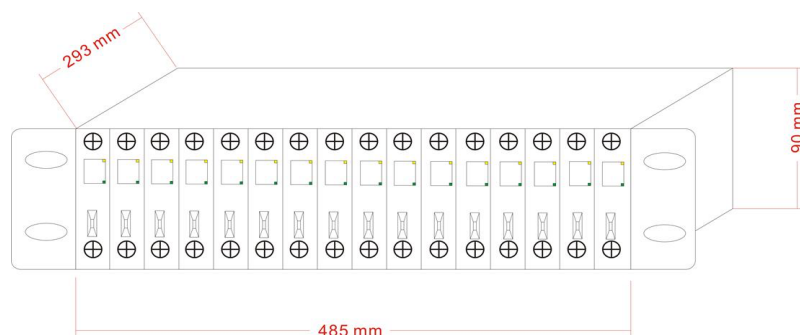

Specification

Slots Provided	16 Slots
Structure	2 U Rack mounted
Power Input	AC 85~265V 50/60Hz
Power Output	DC 5V 16A
Power Configuration	Redundant Power Supply
LED Indication	Power
Max Power Consumption	95W
Operating Temperature	-20~70°C
Working Humidity	5%~90%
Storage Temperature	-40~70°C
Storage Humidity	5% to 90% Non-Condensing
Dimensions	485*293*90mm(L*W*H)
Certification	CE, FCC, RoHS

Order Information

Model No.	Description of Goods
ANT-IE16-2A	16 Slots 2U Rack Mount Chassis for Card-Type Media Converter, Dual Power, AC110-240V
ANT-IE16-2D	16 Slots 2U Rack Mount Chassis for Card-Type Media Converter, Dual Power, DC48V